

## METOS SCALES, models AXM

### Turning on and weighing without tare:

1. Place the scale on a stable horizontal base.
2. Turn on the scale by pressing " ON / ZERO ".
3. If there is any information on the display, press " ON / ZERO ".
4. If there still is information on the display, press "TARE"
5. Start weighing.

### Weighing with tare:

6. Place a container on the scale and press " ON / ZERO ".
7. Start weighing..



Always place an object onto the scale gently.  
Never drop any object onto the platform!  
Excessive force may cause damages to the scale.

### Extended display:

- 8 Keep "MODE" pressed for about 2 seconds and there will be an extra decimal on the display

### Turning off the battery-saving function:

9. Keep " TARE " pressed down and turn on the scale.
10. Press " TARE " until F4 is shown on the display.
11. Press " MODE " once.  
( 4\_oFF is shown on the display. 4\_oFF = the scale goes off after 4 minutes).
12. Press " MODE " again.  
( 0\_oFF is shown on the display. 0\_oFF = continuous use )
13. Save by pressing "TARE"
14. Finish and return to normal function by pressing "ON / ZERO".

### Automatic tare:

15. Keep " TARE " pressed for 5 seconds to switch the function on and off.

### Capacity of the scale

AXM 6000-1	6 kg
AXM 15-2	15 kg



Do not exceed the capacity

### Cleaning:

- Clean with a soft and damp cloth. If necessary, apply a mild detergent.
- Do not use any harsh, abrasive material, acetone, volatile solvent, thinner or alcohol for cleaning.

