

METOS SCALES, models AGS

Turning on and weighing without tare:

1. Place the scale on a stable horizontal base.
2. Turn on the scale by pressing " ON / ZERO ".
3. If there is any information on the display, press " ON / ZERO ".
4. If there still is information on the display, press "TARE"
5. Start weighing.

Weighing with tare:

6. Place a container on the scale and press " ON / ZERO ".
7. Start weighing.

Accumulating:

8. Place the product on the platform and press "M+"
9. Weigh the next product and press "M+"
10. When all desired products are weighed press "MR".
The display shows first the number of weighs and then the sum of the weights.
11. Press "MC" (two buttons, "MR"+"TARE") to reset the memory.



Always place an object onto the scale gently.
Never drop any object onto the platform!
Excessive force may cause damages to the scale.

Extended display:

12. Keep "MODE" pressed for about 2 seconds and there will be an extra decimal on the display

Turning off the battery-saving function:

13. Keep " TARE " pressed down and turn on the scale.
14. Press " TARE " until F4 is shown on the display.
15. Press " MODE " once.
(4_off is shown on the display. 4_off = the scale goes off after 4 minutes).
16. Press " MODE " again.
(0_off is shown on the display. 0_off = continuous use)
17. Save by pressing "TARE"
18. Finish and return to normal function by pressing "ON / ZERO".

Automatic tare:

19. Keep " TARE " pressed for 5 seconds to switch the function on and off.

Capacity of the scale

AGS 6000-1 IP-65 6 kg



Do not exceed the capacity

Cleaning:

- Clean with a soft and damp cloth. If necessary, apply a mild detergent.
- Do not use any harsh, abrasive material, acetone, volatile solvent, thinner or alcohol for cleaning.

